
Microwave Movement Sensor (113961 only)

This product is fitted with a microwave movement sensor. Please see below detailed operating instructions.

Technical Specifications:

roominour opcon	iloutions.					
Operating voltage		220 ~ 240V AC 50/60Hz				
Rated load		400W (Capacitive load) 800W (Resistive load)				
Stand-by power		≤0.5W				
Sensitivity	Ceiling mounted height: 3m	100% / 75% / 50% / 25% / 10%				
	Ceiling mounted height: 6m*	100% / 75% / 50%				
	Wall mounted height: 2m	100% / 75% / 50% / 25% / 10%				
Hold-time		5s / 30s / 90s / 3min / 20min / 30min				
Daylight sensor		2Lux / 10Lux / 25Lux / 50Lux / Disable				
Microwave frequency		5.8 GHz ±75MHz				
Transmitting power		1mW Max.				
Detection range	Ceiling mounted height: 3m	3- 6m (radius)				
	Wall mounted height: 1.5-2m	12-15m				
Detection angle		360° (Ceiling) / 120° (Wall)				
Working temperature		-20°C ~ 60°C				
*50% 75% 100% dat	action concitivity	is workable when installed at 6m mounting height. Only 10%, 259				

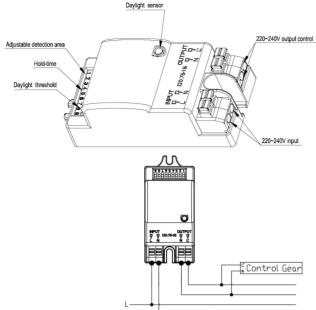

^{*50%, 75%, 100%} detection sensitivity is workable when installed at 6m mounting height. Only 10%, 25% sensitivity is not able to detect motion signal.

Settings:

1. Sensitivity

Sensitivity can be adjusted by selecting the combination on the DIP switches for different applications.

I –100%	_		1	2	3	
II - 75%	ä	Ι	•	•	•	100%
III - 50%	†	II	0	•	•	75%
IV - 25%	0	III	•	0	•	50%
V - 10%		IV	0	0	•	25%
		V	0	0	0	10%

2. Hold-time

Hold-time refers to the time period that the light remains 100% on if no more movement is detected.

I – 5s	•••		4	5	6	
II - 30s III - 90s IV - 3min V - 20min VI - 30min		Ι	•	•		5s
		II	0	•		30s
		III		0		90s
		ΙV	0	0	•	3min
		V	•	•	0	20min
		VI	0	0	0	30min

3. Daylight sensor

Different daylight threshold can be preset on DIP switches. Light will always turn on upon movement if daylight sensor is disabled.

2Lux 10Lux 25Lux 50Lux

Disable*

I – 2Lux _		7	8	9	
II – 10Lux 🛔	Ι				l
III – 25Lux 📮	II	•	•	0	l
IV − 50Lux ^O	III	0	•	0	Ī
V – Disable	IV		0	0	
	V	0	0	0	l

*Disable means the daylight sensor does not work. The sensor will turn on light once motion is detected regardless of ambient light level.

Trouble shooting:

Malfunction Cause Remedy	Cause	Remedy	
	Incorrect light-control setting selected	Adjust daylight threshold setting	
The light will not come on	Faulty lamp	Replace lamp	
	No power supply	Check power to sensor	
The lamp is always on	Continuous movement in the detection zone	Check detection area setting	
The lamp is on without any identifiable movement	The sensor is not mounted for reliably detecting movement	Securely mount enclosure	
	Movement occurred, but not identified by the sensor (Movement behind wall, movement of small object in immediate lamp vicinity etc.)	Reduce sensitivity. Check the movement behind walls to avoid facilities such as water pipe, fan, which may mis-trigger the sensor.	
The lamp will not work despite movement	Rapid movements are being suppressed to minimize malfunctioning or the detection radius is too small.	Check detection area setting	

For further information, please visit https://www.lighting-info.co.uk/113960

V1 27/08/2024

UK Manufacturer: BH17 7BY **EU Manufacturer:** Brilliant AG, Brilliantstrasse 1, D-27442 Gnarrenburg



Instruction manual

Saxby HeroULTRA

113960, 113961





Thank you for purchasing this light fitting. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Please retain these instructions for future reference.

Warning

This power supply is Double Insulated and does not require connection to an Earth circuit.

Please read these instructions carefully before commencing any work.

This unit must be fitted by a competent and qualified electrician. Install in accordance with IEE Wiring regulations and current Building Regulations.

To prevent electrocution switch off at mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge. If you are in any doubt, please consult a qualified electrician.

This light fitting should be connected to a fused circuit.

If replacing an existing fitting, make a careful note of the connections.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Lavout

Plan the desired layout of these fittings carefully, ensuring the cables will reach the distance between the junction box and the light fitting.

Avoid locating any cables in positions that would cause a hazard. Position cables and outdoor rated junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged.

We recommend that you use H05RN-F specification cable (not supplied) which is an outdoor grade, rubber sheathed cable.

The mains supply cable must have a minimum cross sectional area of 1.0mm²

Cables must be protected using suitable conduit or plastic trunking.

The products can be wall or ceiling mounted. If wall mounting ensure that the power supply is at the bottom.

Technical data

Supply 220-240V~. 50 Hz Voltage

Type: 2700/3000/4000/5000/6000K

This product contains a light source of energy efficiency class E.



Bulb

Replaceable (LED only) light source by a professional

8/12/15W LED module (SMD) CCT.



Replaceable control gear by a nrofessional

Conformity with all relevant UKCA Directive requirements.

Conformity with all relevant EC Directive requirements. The power supply is Double Insulated and does not require

connection to an Earth circuit. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check



with your Local Authority or local store for recycling advice. This product is not suitable for dimming.



This product is rated at IP65.



This product is rated at IK08.

CCT & Multi Watt Function



6K/5K/4K/3K/2.7K The colour is changeable between 2700/3000/4000/5000/6000K.

15W 12W 8W The wattage is changeable between 8/12/15W.

Choose your preferred wattage and colour before installing by Wattage Switch or CCT switch on the driver. Note: Before you change the wattage or colour, please

Installation


Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires.


Note that the switch is turned off before installation.


turn off the power switch for safety.


Ensure that the screws and cable entry points are sealed to maintain the IP rating of the product.

- . Open the casing fixed on the lamp.
- Twist and remove the lamp cover from the product, keep safe for refitting later.
- Turn the clip to loose the LED tray in the rear casing.
- Using the rear casing as a template mark the position to drill out the fixing holes. Take care to avoid damaging any concealed wiring and pipes.
- Pull the cable through the cable entry hole and seal to maintain the IP rating.
- Fix the rear casing into the position using the installation plugs and screws.
- Wire as detailed Wiring Diagram.
- Refit the LED tray back into the rear casing and lock the clip.
- Twist the lamp cover back onto the product and lock in place.
- Install the ring into the lamp and complete the installation.
- Replace fuse or circuit breaker and switch on. Your light is now ready for use.

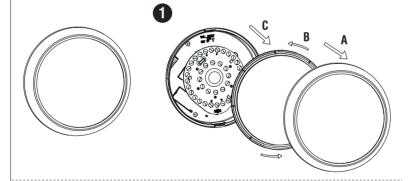

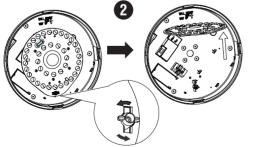

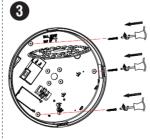

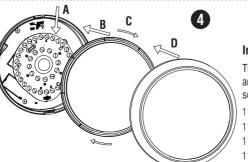

Individual casings


The following individual casings are available for purchase separately.

- 113965: Chrome
- 113966: Black
- 113967: Evelid White
- 113968: Eyelid Black


Wiring


- This product is double insulated and must not be earthed. If there are any incoming earth cables, they must be joined together and well insulated with good quality insulation tape. This is to ensure earth continuity throughout your property.
- Having correctly identified the wiring from your existing light fitting, connect to the guick fit connection block in the following way:

Wiring for 113960

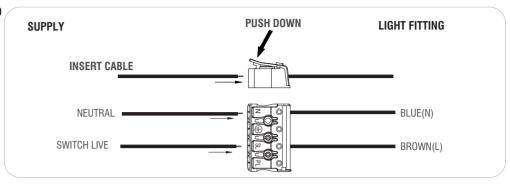

Wiring for 113961

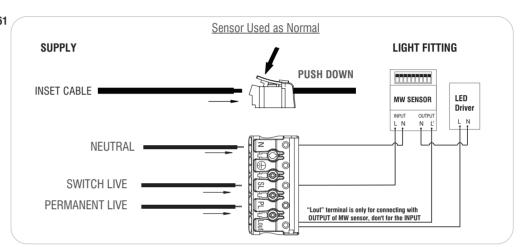

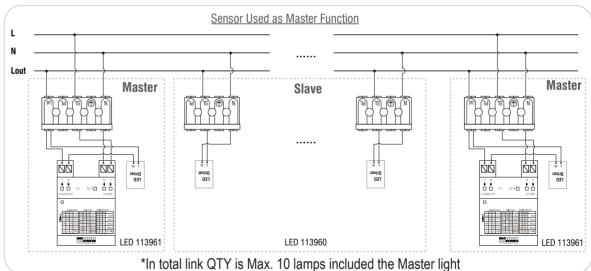

Check that...

• You have correctly identified the wires. • The connections are tight. • No loose strands have been left out of the connection block

Care and Safety

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish. For your safety, always switch off the power supply before cleaning.



This light source is protected by a shade. This part must be replaced immediately should the shade become cracked or damaged. This fitting must not be used without the shade in place.